


STARTING INSTRUCTIONS GUIDE

ATTENTION: Please read and understand the following before operating this machine.

Engine Starting

For parental control and added security, this unit is equipped with a keyed ignition switch.

STEP 1

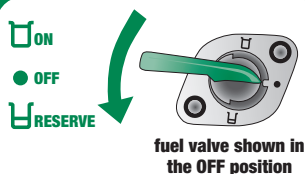

* NOTE: Turn fuel valve to OFF position during transport

TURN FUEL VALVE (LOCATED BENEATH THE FUEL TANK) TO THE "ON" POSITION

STEP 2



BRAKE PEDAL




SWINGARM / ENGINE MOUNTED STOP SWITCH

I = RUN O = STOP


NOTE: For added safety your Fun-Kart is equipped with 2 engine stop switches, one located on the dash and one located on the swingarm / engine. BOTH switches must be in the "RUN" position for the engine to start.

APPLY THE FOOT BRAKE AND ENSURE THE ENGINE STOP SWITCH IS IN THE RUN POSITION

STEP 3

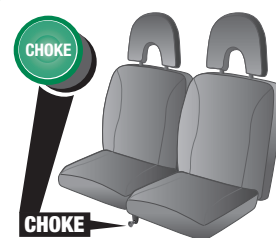

PULL OUT & HOLD CHOKE CABLE

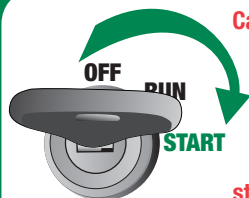

Caution: Do not let the engine turn over for more than 5 seconds at a time as this may cause starter damage



TURN IGNITION KEY CLOCKWISE TO START. ONCE THE ENGINE STARTS, ALLOW THE KEY TO RETURN TO THE RUN POSITION

STEP 4



BEFORE DRIVING!

TEST THAT THE KEY SWITCH WILL TURN OFF THE ENGINE

STEP 5

THE ENGINE WILL WARM UP WITHIN 5 MINUTES, ALLOWING THE ENGINE TO OPERATE AT THE NORMAL RPM. ON A WARM DAY, THIS PERIOD OF TIME MAY BE REDUCED TO LESS THAN 1 MINUTE.



THE CHOKE MAY BE CLOSED ONCE THE ENGINE IS WARM BY RELEASING THE CHOKE, MAKING CERTAIN THAT IT DRAWS BACK IN COMPLETELY

NOTE: This vehicle may be equipped with a pull rope backup starting system. Refer to the Owners Manual for more information.

FOR HELP CALL: 800-643-7332