

FENDER INSTALLATION INSTRUCTION



ONLY ONE PERSON REQUIRED
FOR ASSEMBLY



30min

PARTS INCLUDED:

Fenders For Wide Units

- 1qty FRONT DRIVER SIDE 18166
- 1qty FRONT PASS SIDE 18167
- 1qty REAR DRIVER SIDE 18162
- 1qty REAR PASS SIDE 18163

Fenders For Narrow Units

- 1qty FRONT DRIVER SIDE 18754
- 1qty FRONT PASS SIDE 18755
- 1qty REAR DRIVER SIDE 18164
- 1qty REAR PASS SIDE 18165

Hardware:


- 26qty SCREWS FOR HOOD / FENDERS 18134
- 8qty NYLOC NUTS M6 X 1.00 14236
- 14qty SPEED CLIPS 15823

TOOLS REQUIRED:

- 4mm Allen Wrench/Socket
- 10mm wrench


STEP #1 - Install Front Fenders

Install fender onto vehicle by placing the upper flange (with 4 holes) on the inside of the hood. Install using the 4 screws and 4 nuts.

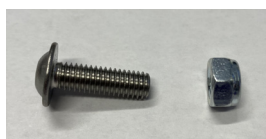

4 SCREWS, 4 NYLOC NUTS

For the vertical portion of the fender, install the 3 speed clips onto the metal bracket first. The flat side of the speed clip should be on the top side of the bracket, the bevel portion should face the tire.

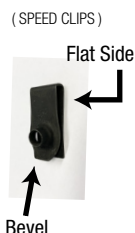

3 SPEED CLIPS

After the speed clips are installed, put the fender on top of the bracket and install the 3 screws. Tighten fasteners and be careful not to overtighten and damage plastics. Repeat all of step #1 for the opposite side.



3 SCREWS

STEP #2 - Install Rear Fenders

Install the 4 speed clips onto the rear bracket. Beveled portion of the speed clip goes on the tire-side of the metal bracket. Flat portion faces towards the front of the vehicle



4 SPEED CLIPS

Slide fender over bracket and align holes. Ensure holes are on top as shown in picture to the right.




Fender goes on top of bottom bracket



Place fender on top of plastic shield. If you are having trouble getting holes aligned, use a screw driver and put it in the top rear hole, slightly pull until all 6 holes are aligned.



Install the 6 screws. 4 into the side bracket, and two screws on top. Repeat all of step #2 for the opposite side.

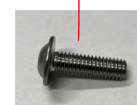

6 SCREWS

REAR FENDER CORRECT SETUP

(top)

CORRECT



WRONG



Fender goes on top of plastic shield, not underneath.

CORRECT



(side)

WRONG



Slide fender slot over the silver steel bracket. Ensure holes are on top as shown in top picture.

FRONT FENDER CORRECT SETUP

CORRECT



Upper flange of fender should be installed underneath hood, not on top.

WRONG



CORRECT



WRONG



Vertical portion of fender gets mounted on top of metal plate. As shown on left.