

Kit PN 19006-R – Single Piece Windshield with Vent

19334 Installation Guide, Single Piece Windshield

SPECIAL REQUIREMENTS: This Guide covers Standard Cab and Crew Cab

TOOLS REQUIRED		ESTIMATED INSTALL TIME	RECOMMENDED SKILL LEVEL
Phillips Screw Driver		1/2 Hour	Beginner

Before you begin, check the contents of the kit against the parts list below. Immediately contact American Landmaster with any questions or discrepancies. American Landmaster cannot assume responsibility for any damage or injury resulting from incorrect installation of parts. American Landmaster suggests that accessory kits be installed by an authorized American Landmaster dealer or service center.

PARTS LIST FOR AMERICAN LANDMASTER ACCESSORY KIT

(6) Quick Release Clamps (6) Washers (6) Screws (1) Single Piece Windshield with Vent

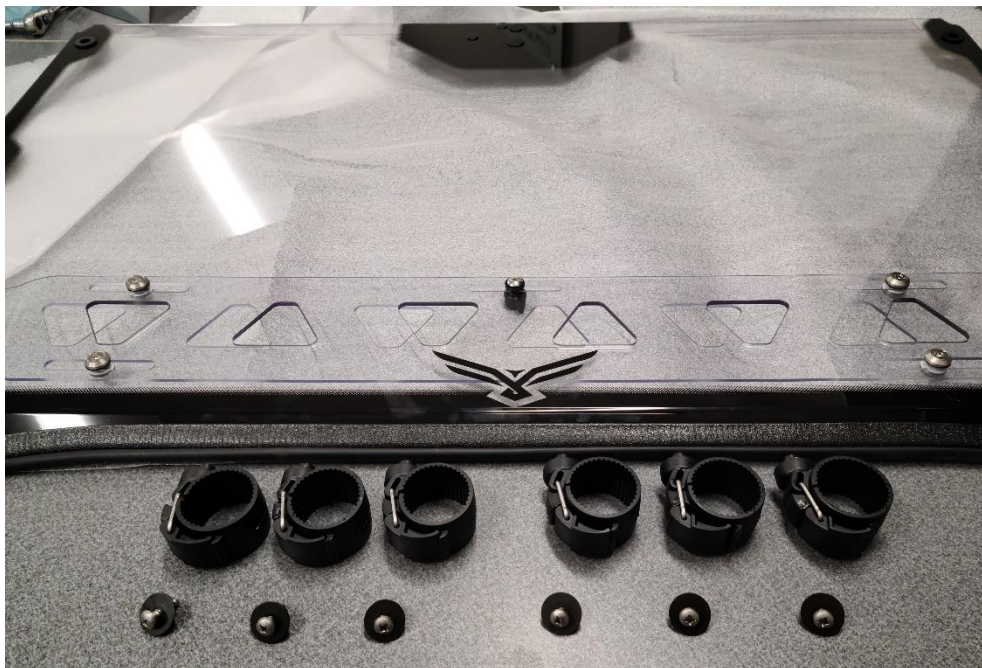


Figure 1 –Kit contents




ASSEMBLY INSTRUCTIONS:

- 1- Remove contents of box, and carefully lay the windshield front side up, as shown, on a flat surface where it won't get scratched.



- 2- Insert clamp into grommet, place washer on exposed front side and screw in place. Repeat this for all 6 clamps.

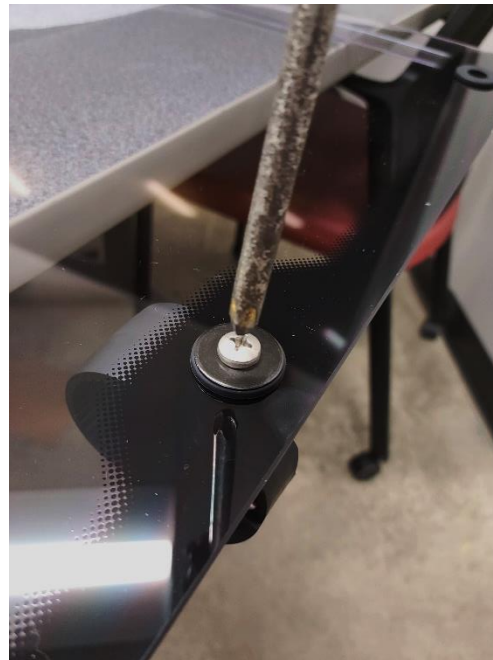




AMERICAN
LANDMASTER

Toll Free 800-643-7332 • Toll Free Fax 800-399-1399 www.AmericanLandmaster.com

INSTALLATION INSTRUCTIONS

- 3- Unclasp all clamps before moving windshield to vehicle.

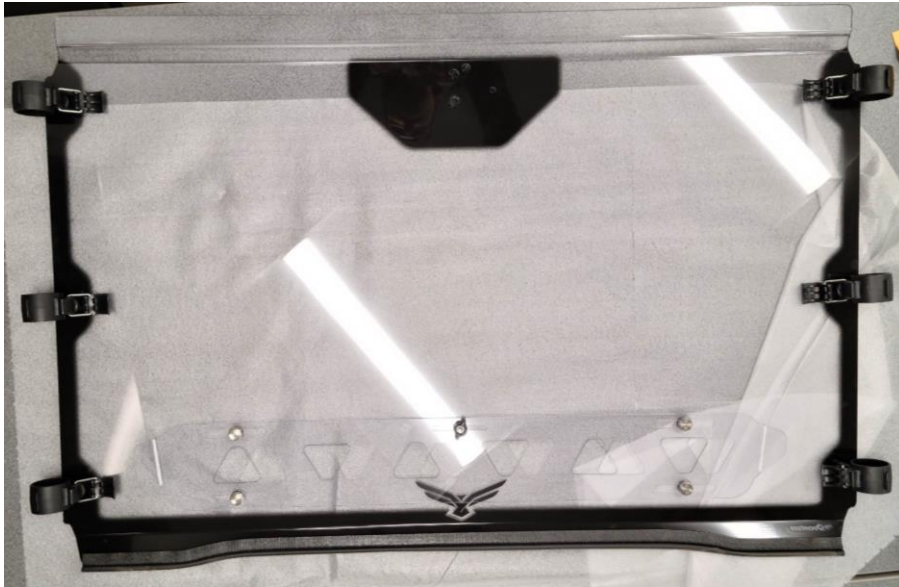

- 4- Hold windshield up to the front of the vehicle. Tuck top edge under the edge of the roof. Bring lower edge up to the dash. The weather seal will rest nearly on the connection between the dash and hood.
- 5- Holding the windshield with one hand, in the center as shown, begin opening the clamps to loosely hold them on the tube.



- 6- Move clasp over latch, and rotate into locked position. Repeat for all 6 clamps.



- 7- Be sure to care for your new windshield with clean microfiber cloth and a light soap and water mix. Remove windshield before towing vehicle to prevent road debris damage.