

Kit PN 18975-R – Front CV Guards

19346 Installation Guide, Front CV guards

SPECIAL REQUIREMENTS: This Guide covers Standard Cab and Crew Cab

TOOLS REQUIRED		ESTIMATED INSTALL TIME	RECOMMENDED SKILL LEVEL
(Two) ½" Wrenches		1/2 Hour	Beginner

Before you begin, check the contents of the kit against the parts list below. Immediately contact American Landmaster with any questions or discrepancies. American Landmaster cannot assume responsibility for any damage or injury resulting from incorrect installation of parts. American Landmaster suggests that accessory kits be installed by an authorized American Landmaster dealer or service center.

PARTS LIST FOR AMERICAN LANDMASTER ACCESSORY KIT

(6) Nuts (12) Washers (6) Bolts (2) CV Guard Brackets

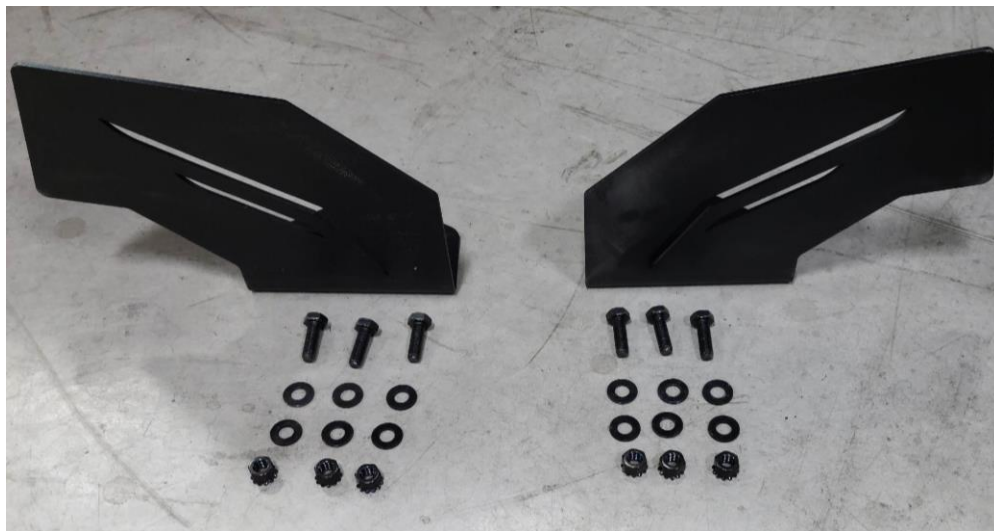


Figure 1 –Kit contents

ASSEMBLY INSTRUCTIONS:

- 1- Set the brackets on the ground with the bolt holes down. The bracket angling up and to the right like the one shown above, will be used on the right A-arm, and the one angled up to the left, will go on the left.



**AMERICAN
LANDMASTER**

Toll Free 800-643-7332 • Toll Free Fax 800-399-1399 www.AmericanLandmaster.com

INSTALLATION INSTRUCTIONS

- 2- Place a washer over a bolt, the bolt will go in the CV guard bracket from the bottom, aimed up as shown to the right.



- 3- Align holes with the front 3 holes on the A-arm as shown.



- 4- Insert the bolt with a washer on it in any of the 3 shared bracket holes. Place another washer on top then a nut. Loosely fasten for all 3. Tighten nut and bolt with the 2 ½" wrenches.





- 5- Repeat previous steps for all 6 bolts and the installed product will look like the image below.

