

Kit PN 19127-R – Standard Sidenets 19397 Installation Guide, Standard Nets

SPECIAL REQUIREMENTS: This Guide covers only Standard Cab

TOOLS REQUIRED		ESTIMATED INSTALL	RECOMMENDED SKILL
		TIME	LEVEL
None		10	Beginner

Before you begin, check the contents of the kit against the parts list below. Immediately contact American Landmaster with any questions or discrepancies. American Landmaster cannot assume responsibility for any damage or injury resulting from incorrect installation of parts. American Landmaster suggests that accessory kits be installed by an authorized American Landmaster dealer or service center.

PARTS LIST FOR AMERICAN LANDMASTER ACCESSORY KIT


(1) Driver Side Net


(1) Passenger Side Net

IDENTIFY THE PASSENGER SIDE NET:

- 1. The passenger sidenet will be identified by the orientation of the buckle and the ladder lock strap clasps.
- 2. Lay the net out on the ground, with the red release button of the buckle on the ground (as seen in Fig. 1), the ladder locks should also be on the top (as seen in Fig. 2). The passenger net will point to the right (as seen in fig. 3), the driver net shall be opposite.




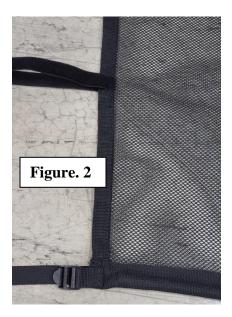


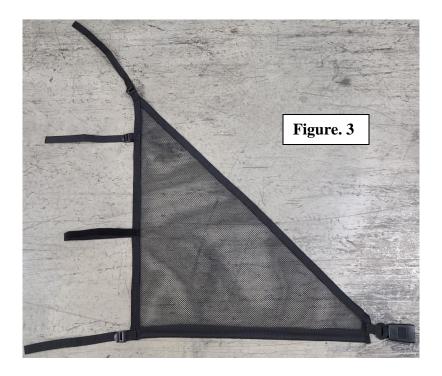

ASSEMBLY INSTRUCTIONS:

- 1. Begin by buckling the net into the metal tab near the dash on the passenger side. See Fig 4.
- 2. Next, loop the top corner strap though the hole between the frame and the seatbelt bracket, shown in Fig. 5.

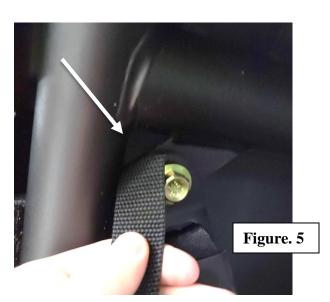


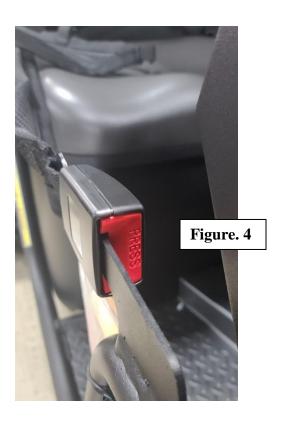

19397 Installation Guide, Standard Nets




3. Pull strap through, and insert into the larger hole of the ladder lock first (fig. 6), then double back through the smaller (fig. 7). Pull strap to lightly make the net taught.

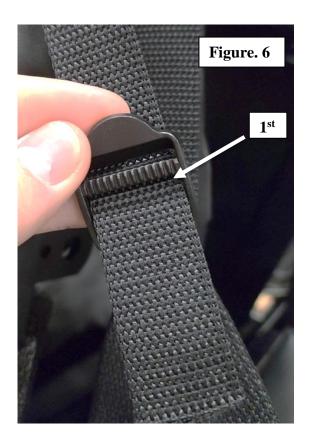



- 4. The next lower strap will go between the two brackets shown in fig. 8. The strap will be secured as described in step 3.
- 5. Insert lowest strap from the outside, under the arm rest, and around the frame as shown in fig. 9. Pull loosely taught.

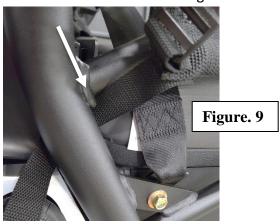



19397 Installation Guide, Standard Nets



6. The Velcro straps are intended to hold the net (see fig. 10) when it is not in use, but can be attached to the frame if the net is buckled and in use.



- 7. Repeat steps 1-6 for the driver side net.
- 8. All straps should be checked and made taught before use. This net is to be used anytime the vehicle is in motion. Failure to use this product as intended can put users at risk of serious injury or death. The net is to be in the upright stored position or removed when not in use.