

LLATION INSTRUCT

As illustrated below, this kit consists of:


Dall 5/ 2 10 11/-2	044
BOIT, 9/16"-18 X 1 1/2"	Qty: 4
Nylon spacer ¾" OD x ¾8" ID x ¾8" (placed near latch assembly)	Qty: 2
Nylon spacer ¾" OD x ¾8" ID x ½" (placed near tailgate)	Qty: 2
Rear fender - universal	Qty: 2
Washer 5/16" type A plain SAE	Qty: 4
Nut ⁵ /16" -18 hex WF ZN	Qty: 4
	(placed near latch assembly) Nylon spacer ¾" OD x ¾" ID x ½" (placed near tailgate) Rear fender - universal Washer ¾1s" type A plain SAE



LUTV REAR FENDER KIT (15682)





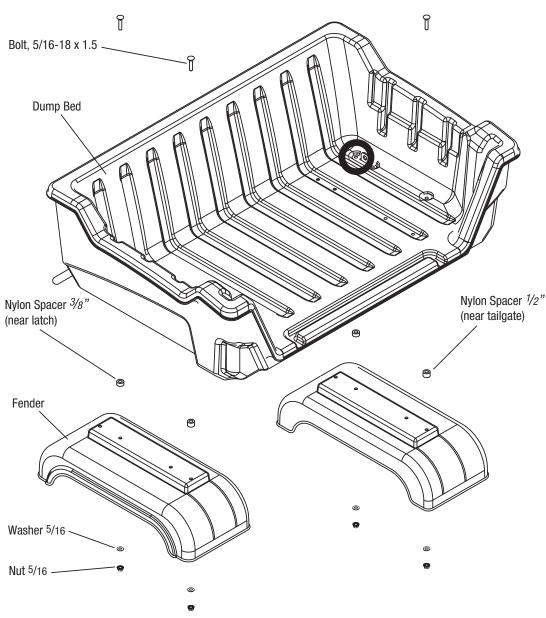

Procedure:



Remove and discard current (2x) 5/16"-18 x 3/4" bolts and nuts located towards the front of cargo bed. (closest to passenger compartment; locations circled on illustration)



Insert Bolt, 5/16"-18 x 1 1/2" into cargo bed holes. Slide nylon spacer onto bolt (underneath cargo bed)

- 3/8" spacer placed near front of bed (latch position)
- 1/2" spacer placed near rear of bed (tailgate position) Install fender (underneath cargo bed) Slide 5/16" washer onto bolt (underneath cargo bed) Attach and tighten 5/16" nut