


EXPLODED VIEW

MODEL 325-00

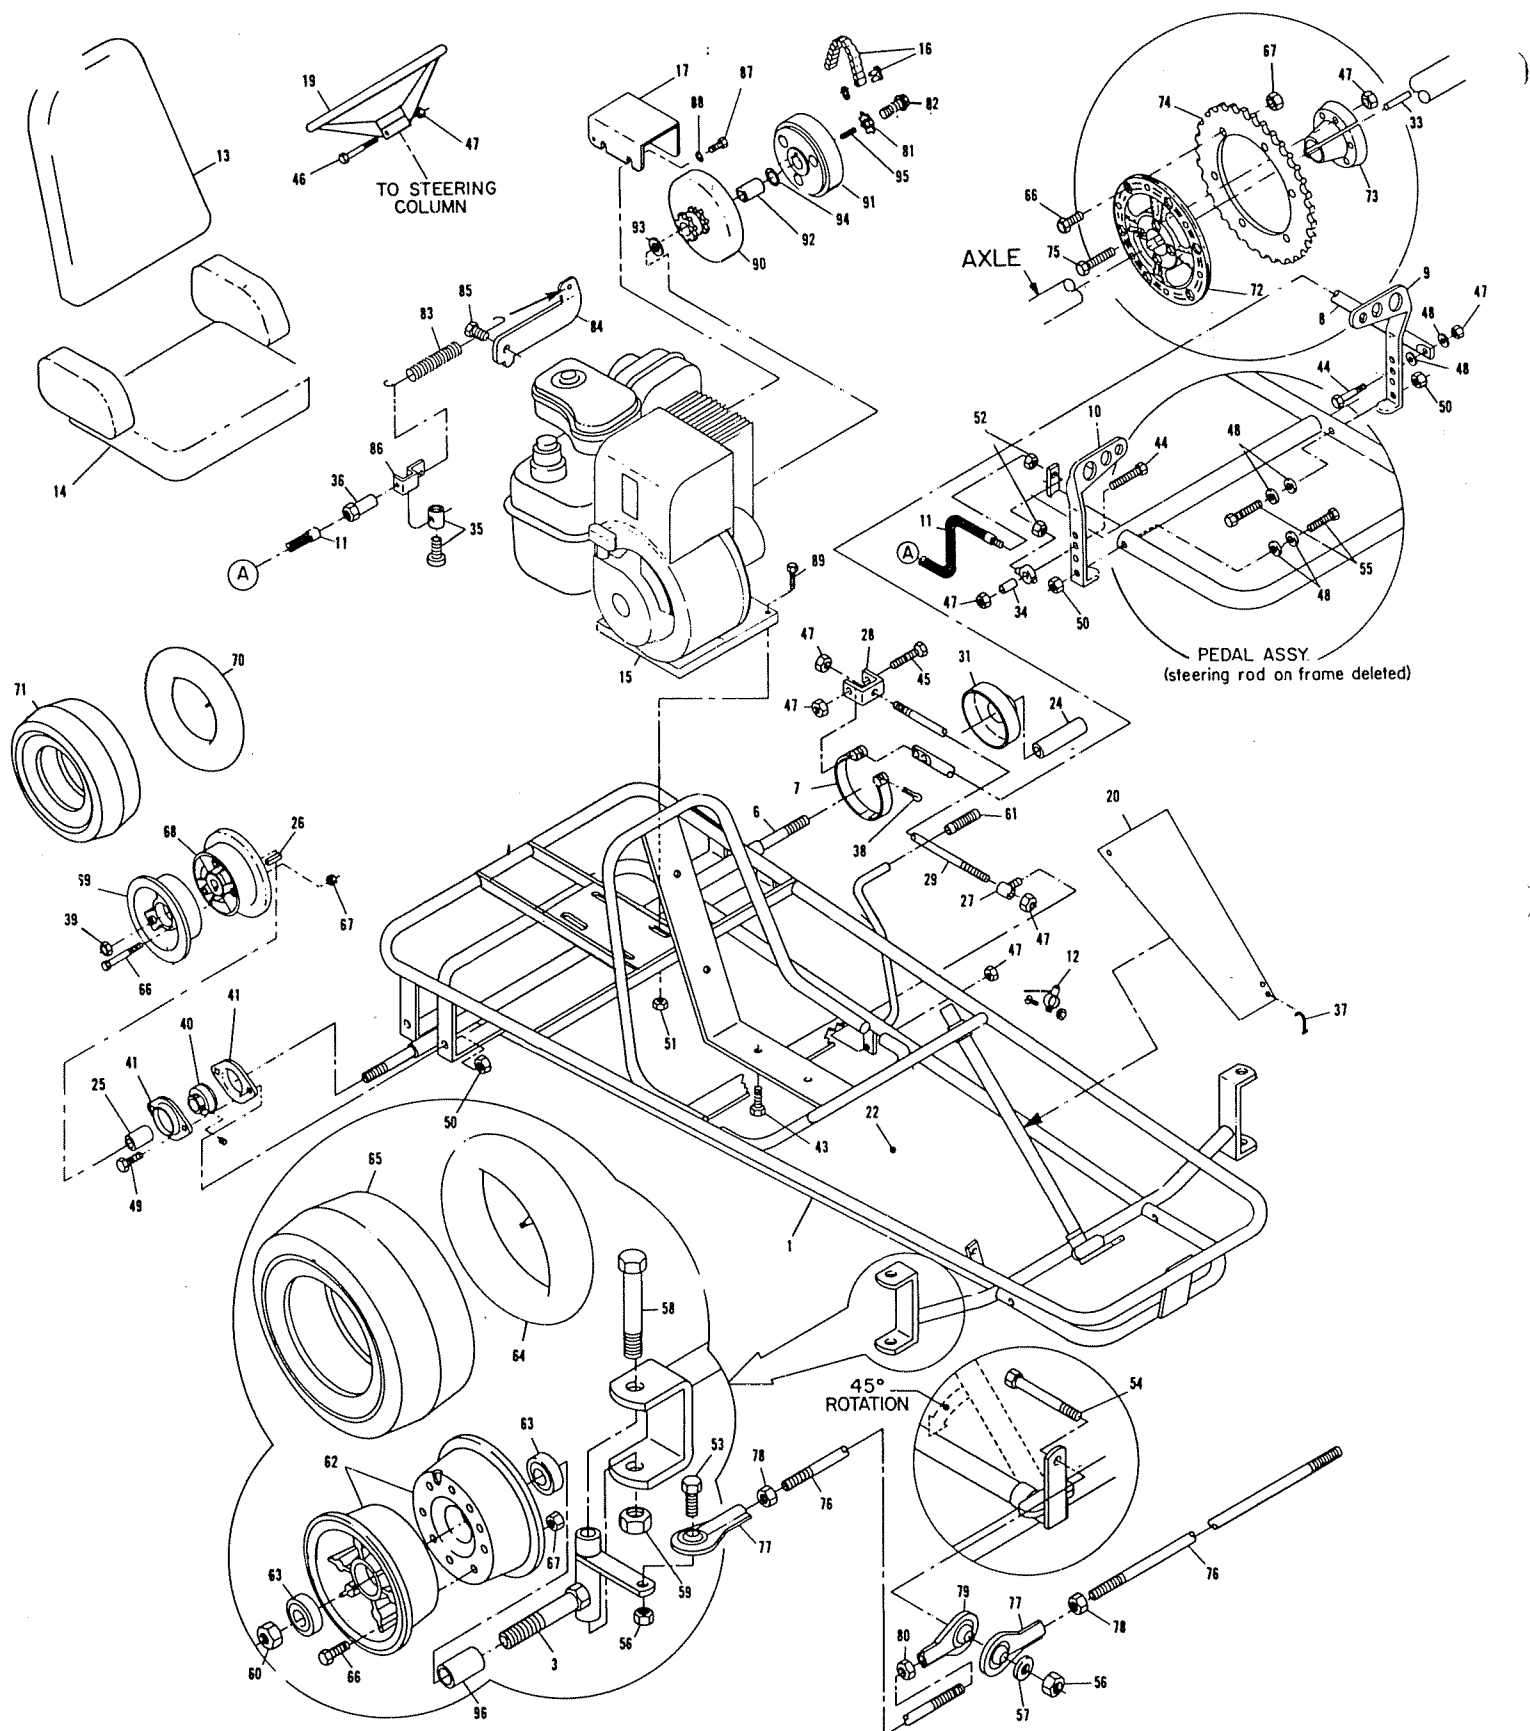

REPAIR PARTS

MODEL 325-00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	2372	Frame	46	9080	1/4x20x2 3/4 Hex Cap Screw
ASM	1464	Tie Rod Assembly	47	9057	1/4-20 Hex UTA Nut
		inc. ref. #76-80	48	1854	1/4" Flat Washer
3	2251	R.H. Spindle	49	1275	5/16-18X 3/4 Hex Cap Screw
NI	2252	L.H. Spindle	50	1189	5/16-18 Hex UTA Nut
ASM	6119	Wheel Assembly, 4" Slick Front	51	1263	5/16-18 Hex Flanged Whizlock Nut
		inc. ref. #62-67	52	9058	5/16-24 Hex Jam Nut
6	2253	Axle Shaft	53	9099	3/8-16X1" Hex Cap Screw
7	1492	Brake Band	54	1174	3/8-16X1-3/4 Hex Cap Screw
8	2673	Brake Rod	55	9110	3/8" Shoulder Bolt
9	8009	Brake Pedal	56	9085	3/8-16 Hex UTA Nut
10	8011	Throttle Pedal	57	9091	3/8" Flat Washer
11	1390	Throttle Cable W/Housing	58	1264	1/2-13X3 1/2 Hex Cap Screw
12	6117	Stopswitch & Wire	59	1012	1/2-13 Hex UTA Nut
13	5159	Seat Back	60	1466	5/8-11 Hex UTA Jam Nut
14	5160	Seat Bottom	61	1971	Grip
15	6010	Engine — 5.0 H.P. Briggs and Stratton, Model 130212, Type 0988-01	62	5158	Wheel Half, 4" Untapped
			63	1093	Bearing
16	6021	Chain W/Masterlink #35X 80 Pitches	64	1053	4" Inner Tube
			65	1751	4.10/3.50x4" Slick Tire
17	5737	Chainguard	66	1185	Hex Head Bolt, Whizlock 1/4-20x 3/4
ASM	1169	Clutch Assembly — inc. ref. #90-95	67	1186	Hex Nut, Whizlock 1/4-20
			68	5127	Wheel Half With 1" Bore
19	6038	Steering Wheel	69	5128	Wheel Half With 3/4" Bore
20	2257	Racing Shield	70	1753	5" Inner Tube
21	2259	Rear Cage Decal	71	6035	4.10/3.50X5" Slick Tire
22	6104	Pan Decal	72	1421	Vari-Hub
23		Not Used	73	5625	Vari-Hub Bushing
24	5176	Drum Spacer, 3 1/4"	74	1420	Sprocket #35X60 Tooth
25	2265	Wheel Spacer, 3/4"	75	1848	1/4-20X1 1/4 Hex Cap Screw, Grade 5
26	6123	1/4X1/4x1 1/4 Key	76	1465	Tie Rod
27	2090	Linkage Slide	77	1414	R.H. Rod End
28	2091	Yoke	78	9092	3/8-24 Jam Nut
29	2262	Threaded Link	79	1415	L.H. Rod End
ASM	5152	Vari-Hub Assembly — inc. ref. #44, 45, 47, 66, 72-75	80	9024	3/8-24 Jam Nut-L.H.
			81	9001	Lockwasher, 3/8 Int/Ext
31	1078	Brake Drum	82	1491	5/16-24X 3/4 Hex Head Bolt
ASM	6099	Wheel Assembly — inc. ref. #66-71	83	6185	Extension Spring
			84	1320	Spring Anchor
33	1775	1/4X1/4X1 1/4 Key	85	1321	Screw
34	1389	1/4 I.D. X 5/16 Bushing	86	1285	Connector
35	1018	Cable Stop W/Screw	87	9101	Hex Head Screw 5/16-24X 1/2 Nylock
36	1628	Cable Retainer	88	9030	Lockwasher, 5/16 Int. Tooth
37	1019	TyWrap	89	1122	Hex Head Bolt, 5/16-18X1 1/2
38	9116	Cotter Pin 3/32 Dia. X 3/4	90	1165	Drum
39	9052	3/4-16 Hex UTA Nut	91	1166	Drive Assembly
40	1759	Axle Bearing	92	1167	Bearing With Key
41	1760	Bearing Flange	93	1168	Washer 3/4 I.D. X 1" O.D.
43	9006	1/4-20X 1/2 Hex Flanged Whizlock Screw	94	5013	3/4 I.D. Fiber Washer
			95	1030	Key 3/16X 3/16X 3/4
44	1846	1/4-20X 3/4 Hex Cap Screw, Grade 5	96	5157	Spacer
45	1849	1/4-20X1 1/2 Hex Cap Screw, Grade 5	NI	1082	Wheel Spacer 7/16"
			NI	2374A	Manual

ASM—Complete Assembly

NI—Not Illustrated And/Or Indexed