

Operator's Manual SUPPLEMENT

MANCO MODEL NO.
392-00

WARNING:
Read Engine
Owner's Manual,
Vehicle Operator's
Manual, and
Supplement
Carefully Before
Operating
Vehicle.

Parts List




MANCO
PRODUCTS, INC.

4404 Engle Ridge Drive Ft. Wayne, Indiana 46804 219-432-1596

**THIS VEHICLE IS FOR
OFF-ROAD USE ONLY**

BEFORE OPERATING THIS VEHICLE, THE OWNER AND/OR OPERATOR MUST UNDERSTAND THE VEHICLE WAS NOT DESIGNED OR MANUFACTURED TO MEET SPECIFICATIONS FOR USE ON PUBLIC ROADS, STREETS, HIGHWAYS, OR THOROUGHFARES AND HAVE READ AND HAVE AN UNDERSTANDING OF ALL THE INSTRUCTIONS FOR SAFE ASSEMBLY AND OPERATION AS WELL AS THE INSTRUCTIONS GOVERNING THE ENGINE AND OTHER PORTIONS OF THE VEHICLE.

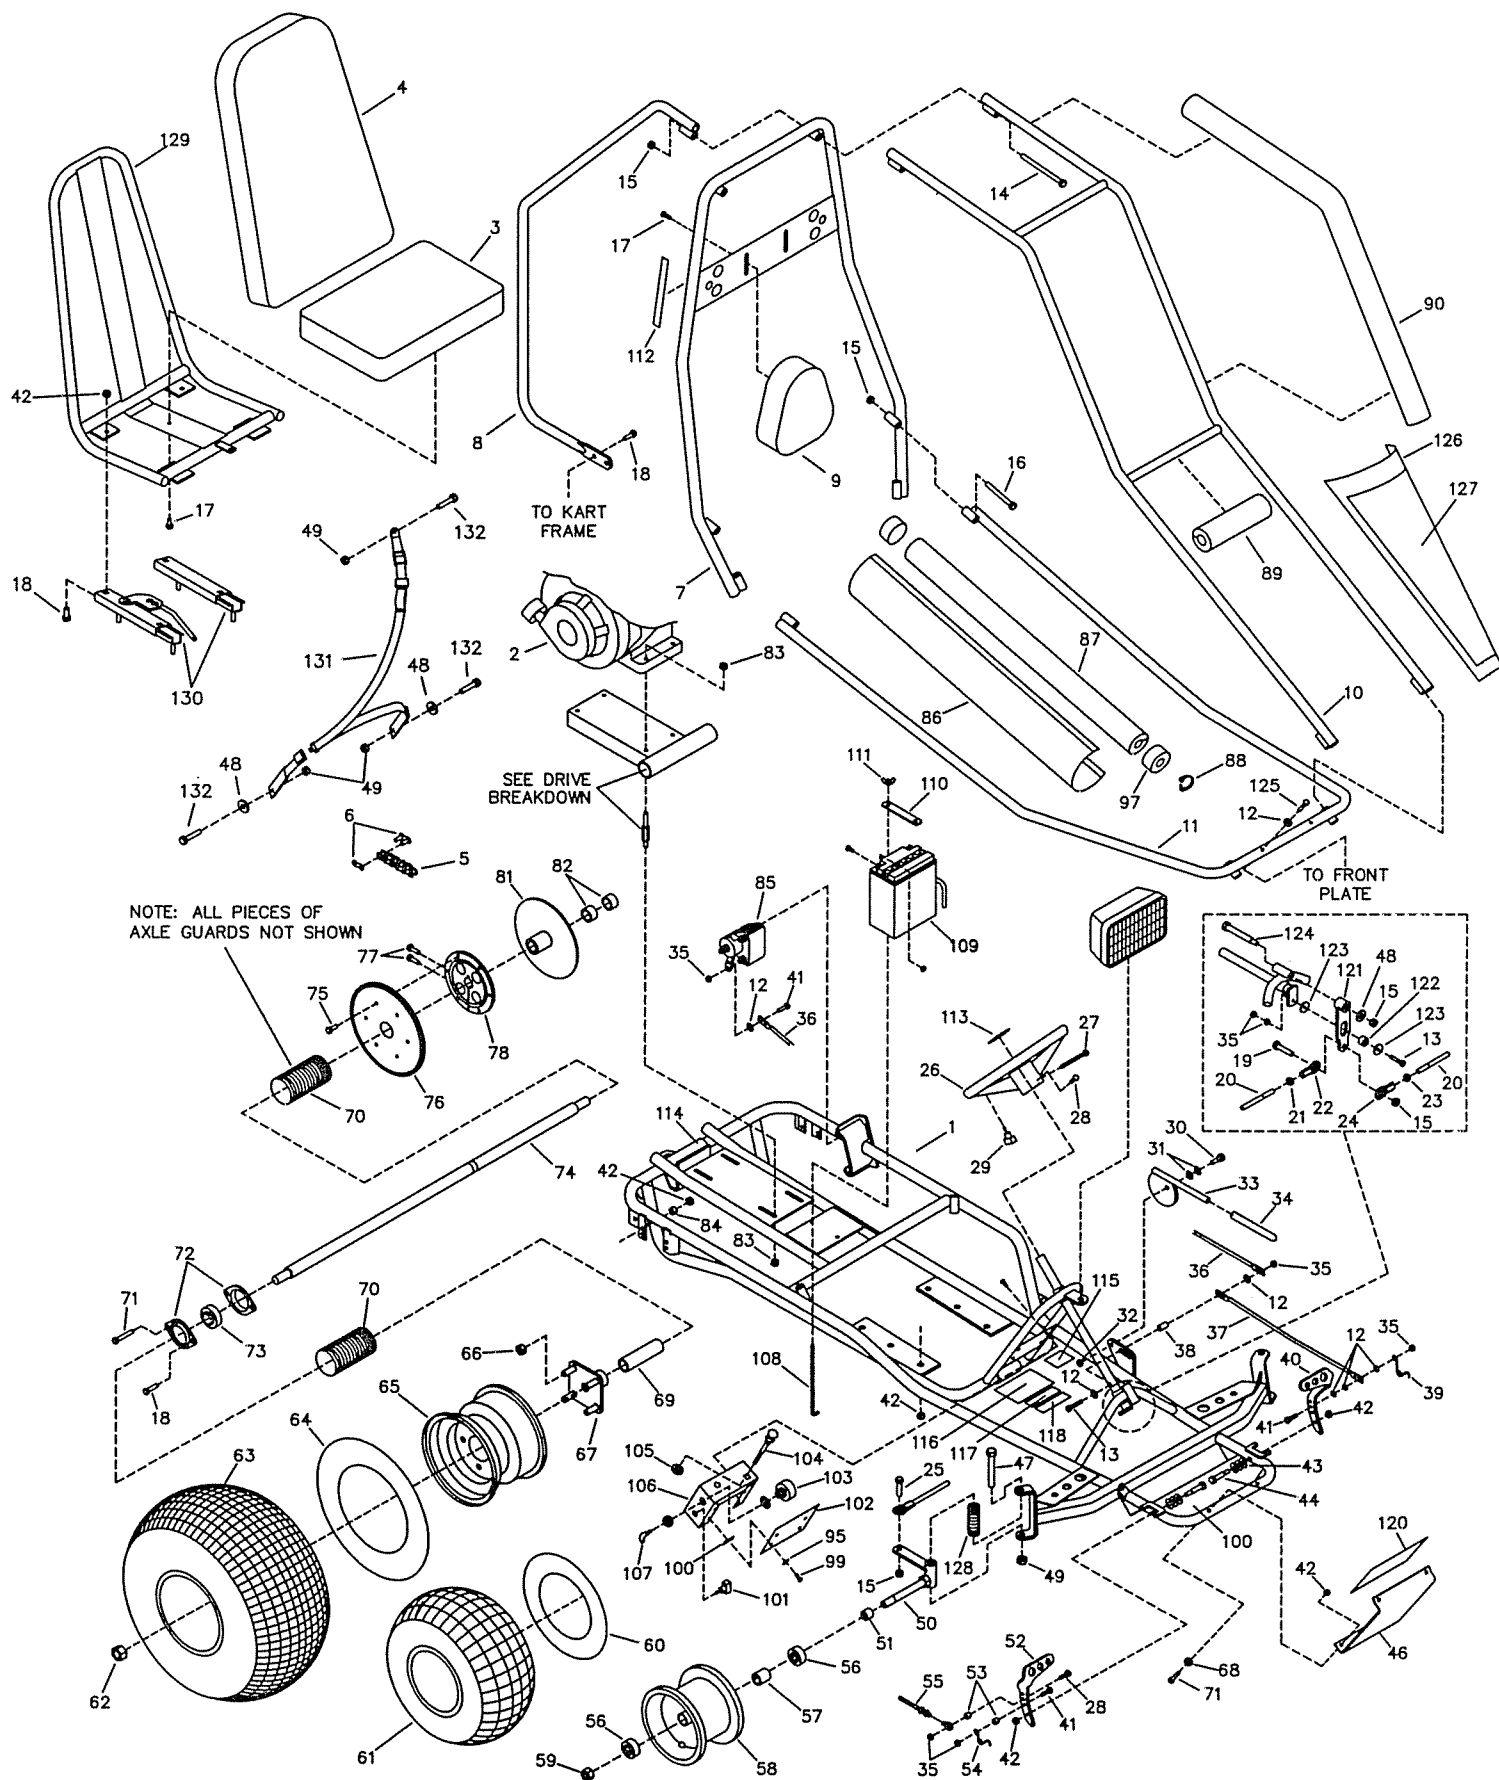


REPAIR PARTS - 392-00

REF.	PART	DESCRIPTION	REF.	PART	DESCRIPTION
NO.	NO.		NO.	NO.	
1	10401-5	Frame - Red	71	6573	Bolt, 5/16-18 x 1-3/4"
2	10421	Engine, 12HP Tecumseh	72	6617	Bearing Flange
3	5557	Seat Bottom	73	3941H	Bearing, 1" ID
4	8748	Seat Back	74	8223H	Axle Shaft
5	9343	Chain, 420 x 71 Links (incl. 6)	ASM	6420H	Sprocket Asm. (incl. 75-78)
6	2037	Master Link, 420 Chain	75	9006	Bolt, 1/4-20 x 1/2" Flanged Whiz
7	8711-5	Center Bar	76	6282	Sprocket, 420 x 54 Teeth
8	8702-5	Rear Bar	77	6701	Bolt, 5/16 x 1-1/4" Socket Head
9	8735	Headrest	78	6280H	Sprocket Hub
10	8714-5	Overhead Bar	79	-----	
11	8710-5	Front Bar	80	-----	
12	1854	Washer, No. 14 Flat	81	6314H	Brake Rotor
13	1849	Bolt, 1/4-20 x 1-1/2"	82	2265	Spacer, 1" ID x 3/4"
14	6452	Bolt, 3/8-16 x 5"	83	1263	Nut, 5/16-18 Flanged Whiz
15	9085	Nut, 3/8-16 Toplock	84	9674	Spacer, 3/8 ID x 3/8"
16	2386	Bolt, 3/8-16 x 3-1/2"	85	8197	Brake Caliper Asm.
17	5839	Bolt, 1/4-20 x 3/4" Flanged Whiz	86	8729	Arm Pad Cover
18	9176	Bolt, 5/16-18 x 1"	87	8726	Foam, 26" Gray
19	9145	Bolt, 3/8-16 x 1-3/4"	88	8730	Plastic Hose Clamp, 1-1/4" ID
ASM	6430	Tie Rod Asm. (incl. 20-24)	89	8732	Foam, 9-1/2" Gray
20	6431	Tie Rod	90	8725	Foam, 37" Gray
21	9092	Nut, 3/8-24 RH Jam	91	6305-2	Tail Light Bracket
22	1414	Rod End - RH	92	6508	Tail Light Assembly
23	9024	Nut, 3/8-24 LH Jam	93	9106	Bolt, #10-32 x 1/2"
24	1415	Rod End - LH	94	6319	Tail Light Ground Wire
25	9146	Bolt, 3/8-16 x 1-1/2"	95	6039	Washer, #10 Internal Lock
26	6038	Steering Wheel	96	6193	Nut, #10-32 Acorn
27	9080	Bolt, 1/4-20 x 2-3/4"	97	6880	End Cap
28	9160	Bolt, 1/4-20 x 7/8" Nylock	98	6364	Headlight Assembly
29	9799	Stop Switch Assembly	99	6046	Bolt, #10-24 x 1/2"
30	9172	Bolt, 3/8 x 1/4 Shoulder	100	5135	Nut, #10 Tinnerman
31	6441	Washer, 3/8 ID Spring	101	6391	Light Switch Assembly
32	6440	Nut, 5/16-18 Jam	102	9528-2	Cover Plate
33	6773-2	Parking Brake Handle	103	6344	Start Switch w/Key
34	6442	Brake Handle Cover	104	8118	Choke Cable
35	9057	Nut, 1/4-20 Toplock	105	6353	Washer, Square Hole
36	8215-2	Rear Brake Rod	106	6296-2	Control Box
37	9638-2	Front Brake Rod	107	2290	Ignition Key
38	9869	Spacer, 1/4 ID x 5/16 OD x 5/8"	108	9430	Battery Hold Down Rod
39	9502	Spring, Left Wound	109	3633	Battery
40	1436	Pedal, Brake	110	9642-2	Battery Clamp Bar
41	1847	Bolt, 1/4-20 x 1"	111	9468	Nut, #10-32 Nylock Wing
42	1189	Nut, 5/16-18 Toplock	NI	9677	Decal, Warning: Hot Surfaces (on engine)
43	9091	Washer, 3/8 Flat	NI	9678	Decal, Warning: Engine Exhaust (on engine)
44	1447	Pedal Bolt	NI	5964	Decal, Oil Warning (on engine)
45	-----		112	6540	Decal, Warning: Wear Helmet
46	10489-5	Front Plate - Red	113	1689	Decal, Steering Wheel
47	5682	Bolt, 1/2-13 x 5-1/2"	114	2873	Decal, Trailer Load
48	9022	Washer, 1/2 Flat	115	8138	Decal, Warning: Entanglement
49	1012	Nut, 1/2-13 Toplock	116	4504	Decal, Yellow Warning
50	2457	Spindle, Right	117	2832	Decal, No Passengers
NI	2458	Spindle, Left	118	8153	Decal, Age Restriction
51	5157	Spacer, 5/8 ID x 3/4"	119	1441	Decal, Front Floor Pan
52	1437	Pedal, Throttle	120	8830	Decal, Front Plate
53	1389	Bushing, 1/4 ID x 5/16"	121	9834-2	Steering Crank Weldment
54	9503	Spring, Right Wound	122	9873	Cam Follower Bearing
55	9345	Throttle Cable	123	9872	Washer, 1/4 Flat
56	5090	Bearing, 5/8 ID	124	9871	Shoulder Bolt, 1/2 x 3"
57	5950	Spanner, 5/8 ID x 2-1/8"	125	1865	Bolt, 1/4-20 x 1-3/4"
58	9309FP	Wheel Assembly, Front	126	2257	Fairing
59	1046	Nut, 5/8-11 Toplock	127	8734	Fairing Decal
60	3802	Inner Tube, 6"	128	9709	Compression Spring
61	4915	Tire, 145/70 x 6 Knobby	129	10402-2	Seat Frame
62	9162	Nut, 3/4-10 Toplock	130	6734	Seat Slide - pair
ASM	1412	Wheel Asm, Rear (incl. 63-65)	131	8373	Seat Belt Shoulder / Lap
63	1452	Tire, 22 x 11 - 8 Tubeless	132	9188	Bolt, 1/2-13 x 1-1/2"
64	1430	Inner Tube, 8" (Repair Part Only)	NI	9247R4	Assembly Instructions
65	1451	Wheel Rim, 8"	NI	6477	Dingo Operator's Manual
66	1428	Nut, 1/2-13 Cone Wheel	NI	8121	Honda Engine Manual
67	1557H	Wheel Hub w/Studs			
68	9060	Washer, 5/16" Flat			
69	4660	Spacer, 1" ID x 4-7/16"			
70	K389-12	Axle Guard Repair Kit			


ASM = Assembly
NI = Not Illustrated

CALIPER BREAKDOWN

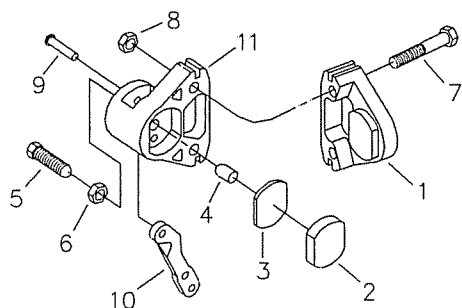

REF. NO	PART NO	DESCRIPTION
ASM	8197	Brake Caliper (incl. 1-11)
ASM	9810	Brake Pad Svc Kit (incl. 1-3)
1	*	Anvil w/Lining
2	*	Brake Lining
3	3928	Backing Plate
4	3930	Actuator Pin
5	3931	Adjuster Pin
6	3932	Nut, Jam
7	9158	Bolt, 3/8-16 x 2-1/4"
8	9085	Nut, 3/8-16 Toplock
ASM	6534	MB-1 Service Kit (incl. 9-11)
9	*	Groove Pin
10	*	Lever
11	*	Brake Housing

TORQUE CONVERTER BREAKDOWN

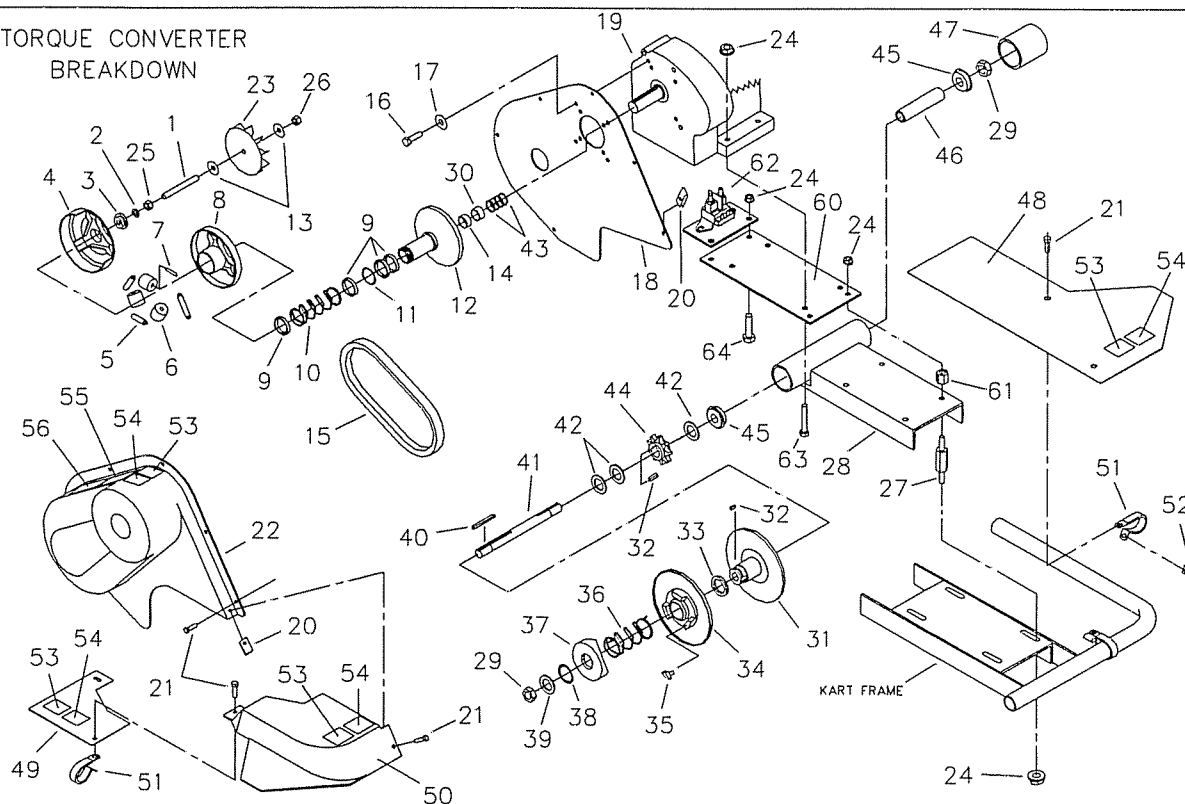


REF. NO	PART NO	DESCRIPTION
1	8689	Stud, 3/8-24 x 4-1/4"
2	1130	Washer, 3/8 Split Lock
3	2468	Washer, Pilot
ASM	2594	Driver Pulley Assembly (incl. REF. 4-12)
4	*	Cover and Drive Plate
5	2472	Extension Spring
6	2470	Cam Roller
7	2471	Spring Clip
8	*	Moveable Face and Hub
9	2474	Guide Bushing
10	2475	Compression Spring
11	*	Retaining Ring
12	*	Fixed Face and Post
13	9125	Washer, 3/8 Flat
14	1082	Spacer, 1" ID x 7/16
15	6814	Belt, Symmetrical
16	9101	Bolt, 5/16-24 x 3/4"
17	9060	Washer, 5/16 Plain
18	8745	Cover Panel
19	10421	Engine, 12HP Tecumseh
20	2449	Nut, Tinnerman
21	9006	Bolt, 1/4-20 x 1/2" Whiz
22	8739	Cover Assembly

REF. NO	PART NO	DESCRIPTION
23	8600	Impeller
24	1263	Nut, 5/16-18 Flange
25	2388	Nut, 3/8-24 Hex
26	9123	Nut, 3/8-24 Toplock Hex
27	9186	Bolt, 5/16-18 x 1-1/2"
28	2896	Chassis
29	1466	Nut, 5/8-11 Flexlok Jam
30	4914	Spacer, 1" ID x 9/16
ASM	8664	Driven Pulley Assembly (incl. REF. 31-39)
31	*	Fixed Face and Post
32	1031	Key, 3/16sq x 1/2"
33	2483	Spacer
34	*	Moveable Face and Cam
35	2516	Button Insert
36	2480	Torsion Spring
37	*	Fixed Cam
38	2478	Thrust Washer
39	2477	Retaining Ring
40	3403	Key, 3/16sq x 2"
41	8854	Jackshaft, 13.69"
42	1119	Spacer, 5/8ID x 1/8"
43	3887	Spacer, 1" ID x 1/16
44	1125S	Sprocket, 9T #420

REF. NO	PART NO	DESCRIPTION
45	5090	Bearing
46	2430	Spanner
47	8194	Cap, Plastic
48	8878	Right Deck Cover
49	8922	Left Deck Cover
50	8921	Caliper Cover - Left
51	8266	Loop Clip
52	8227	Clip Nut
53	1049	Decal, Caution
54	4912	Decal, Warning: Guard
55	8138	Decal, Warning: Hair Entang.
56	6958	Decal, Tire Pressure
57	---	---
58	9176	Bolt, 5/16-18 x 1"
59	9030	Washer, 5/16 Int. Lock
60	10411	Adapter Plate
61	8506	Engine Standoff
62	8679	Solenoid Assembly
63	9186	Bolt, 5/16-18 x 1-1/2"
64	2264	Bolt, 5/16-18 x 3/4"
NI	9677	Decal, Warning: Hot Surfaces
NI	9678	Decal, Warning: Eng. Exhaust
NI	5964	Decal, Oil Warning

* = Not Available Separately
 ASM = Assembly NI = Not Illustrated

WIRING DIAGRAM

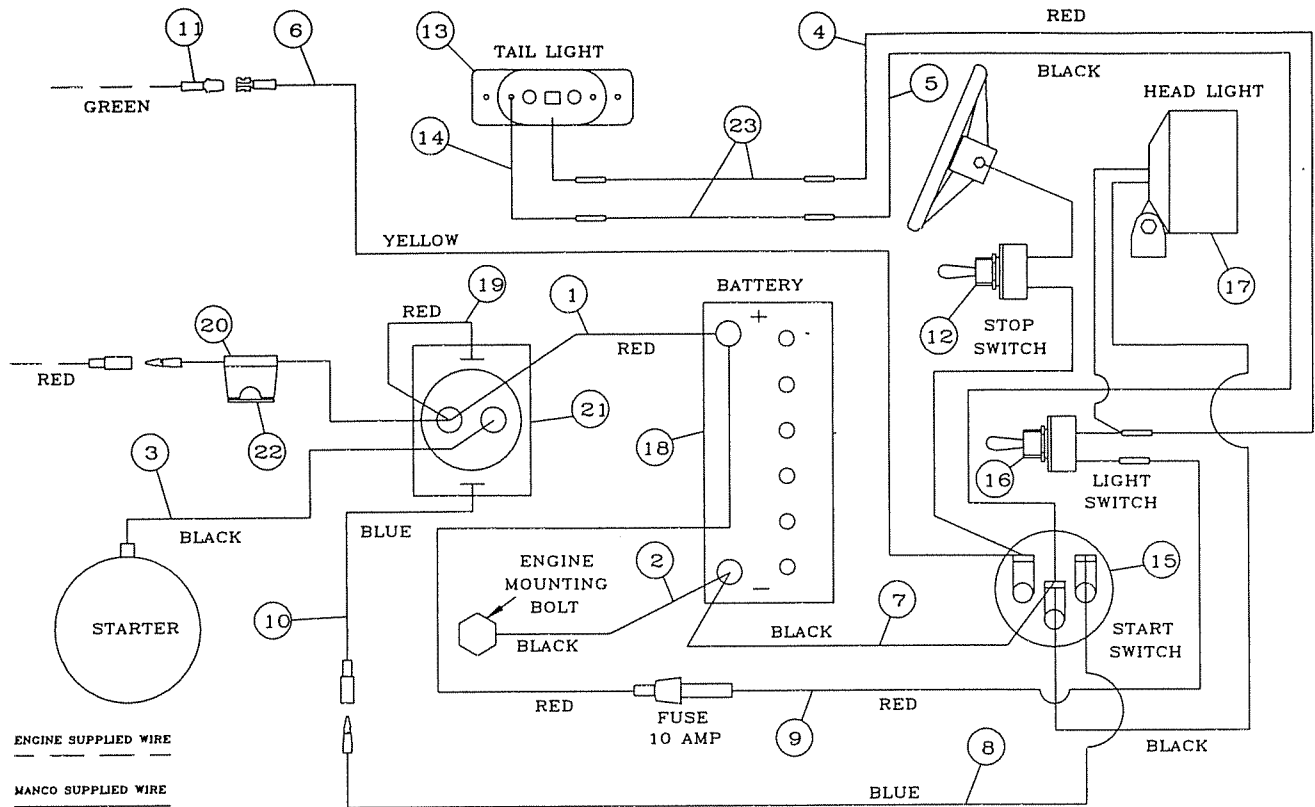

REF NO.	PART NO.	DESCRIPTION
1	3611	Battery Cable, Red 9 in.
2	3610	Battery Cable, Black 9 in.
3	6516	Battery Cable, Black 9 in.
ASM	9376P	Wiring Harness (incl. 4-9)
4	9379	Wire, Taillight/Light Switch (Red)
5	9381	Wire, Taillight/Switch (Black)
6	9383	Wire, Engine/Switch (Yellow)
7	6386	Wire, Batt Gnd/Switch (Black)
8	9385	Wire, Solenoid/Switch (Blue)
9	9377	Wire, Solenoid/Light Switch (Red)
10	8281	Start Wire Adapter
11	8108	1/4" Male Tab Terminal
NI	6505	Poly Loom 43"
NI	6897	Poly Loom 28"
NI	6763	Poly Loom "Tee"
NI	6813	Poly Loom "Outlet"
12	6394	Stop Switch Assembly

REF NO.	PART NO.	DESCRIPTION
13	6508	Tail Light Assembly
14	6319	Wire, Taillight Ground
15	6344	Start Switch
16	6391	Light Switch Assembly
17	6364	Headlight Assembly
NI	2964	Headlight Bulb
18	3633	Battery
19	2093	Solenoid Jumper Wire Assembly
20	8216	Fuse Assembly, 15 Amp
21	2084	Solenoid
22	8202	Fuse, 15 Amp
23	8504	Extension Wire Assembly
NI	9389	Fuse, 10 Amp
NI	6304-2	Solenoid Bracket, Black

NI = Not Illustrated

ASM = Assembly